


COT MOBILE

next

Assembly Instructions :

Please spend a short time reading this leaflet and then follow the simple step-by-step instructions.

- Position the lower arm at the appropriate place at the foot of the cot and secure to the cot rail with the mounting nut.
- Insert middle section and push in upper arm
- Put on music box cover and hang the music box onto the hook of the upper arm.
- Suspend the carousel from the music box.

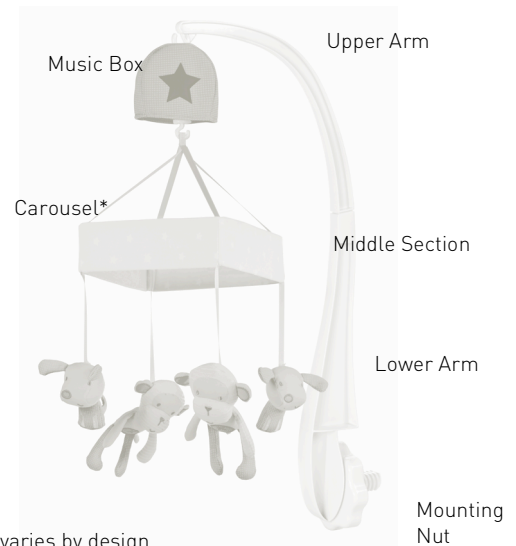

Important :

- Before assembling, if any part is missing or damaged return to the store for a replacement.
- Suitable from birth to five months, mount on cot rail.
- Possible entanglement injury. Keep out of baby's reach. Remove from the cot when baby begins to push up on hands and knees or can sit unaided.
- Do not mount mobile directly over baby.
- Do not mount on rocking cot.
- Do not mount on a playpen or any wall.
- Do not mount mobile on a soft sided playpen or on any cot sides that can be raised or lowered.
- This product is not a toy.
- A cot mobile is intended for visual stimulation and is not intended to be grasped by the child.
- Always attach with all provided fasteners.
- To protect the life of the musical movement. Do not wind the music box too tightly.
- Do not let the music box get wet.

Product Care :

Sponge clean with a damp cloth. Air dry. Do not immerse in water.

Helpline :

If you have any problem with this item, please contact Customer Services.
Tel: 0333 777 8999

Please retain this leaflet for further reference.